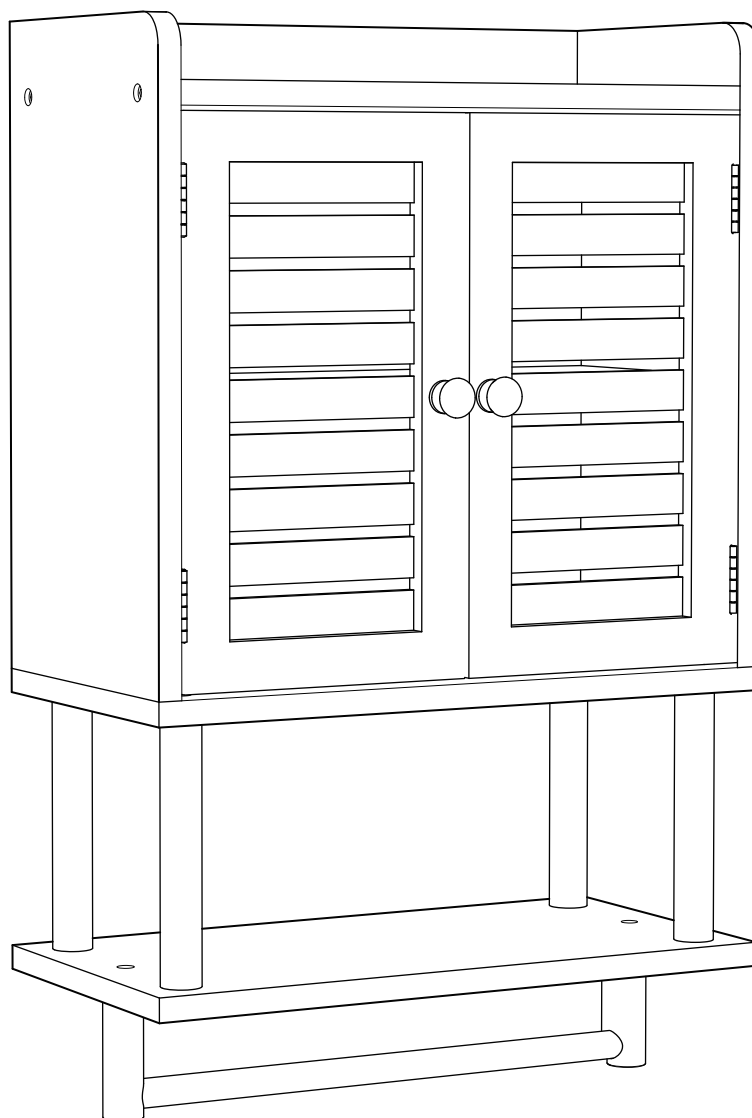





AmazerBath

Wall Mounted Cabinet



Ensure that all parts and hardware are available before beginning assembly.
Follow each step carefully to ensure the proper assembly of this product
The assembled product looks great and it doesn't take up too much space.

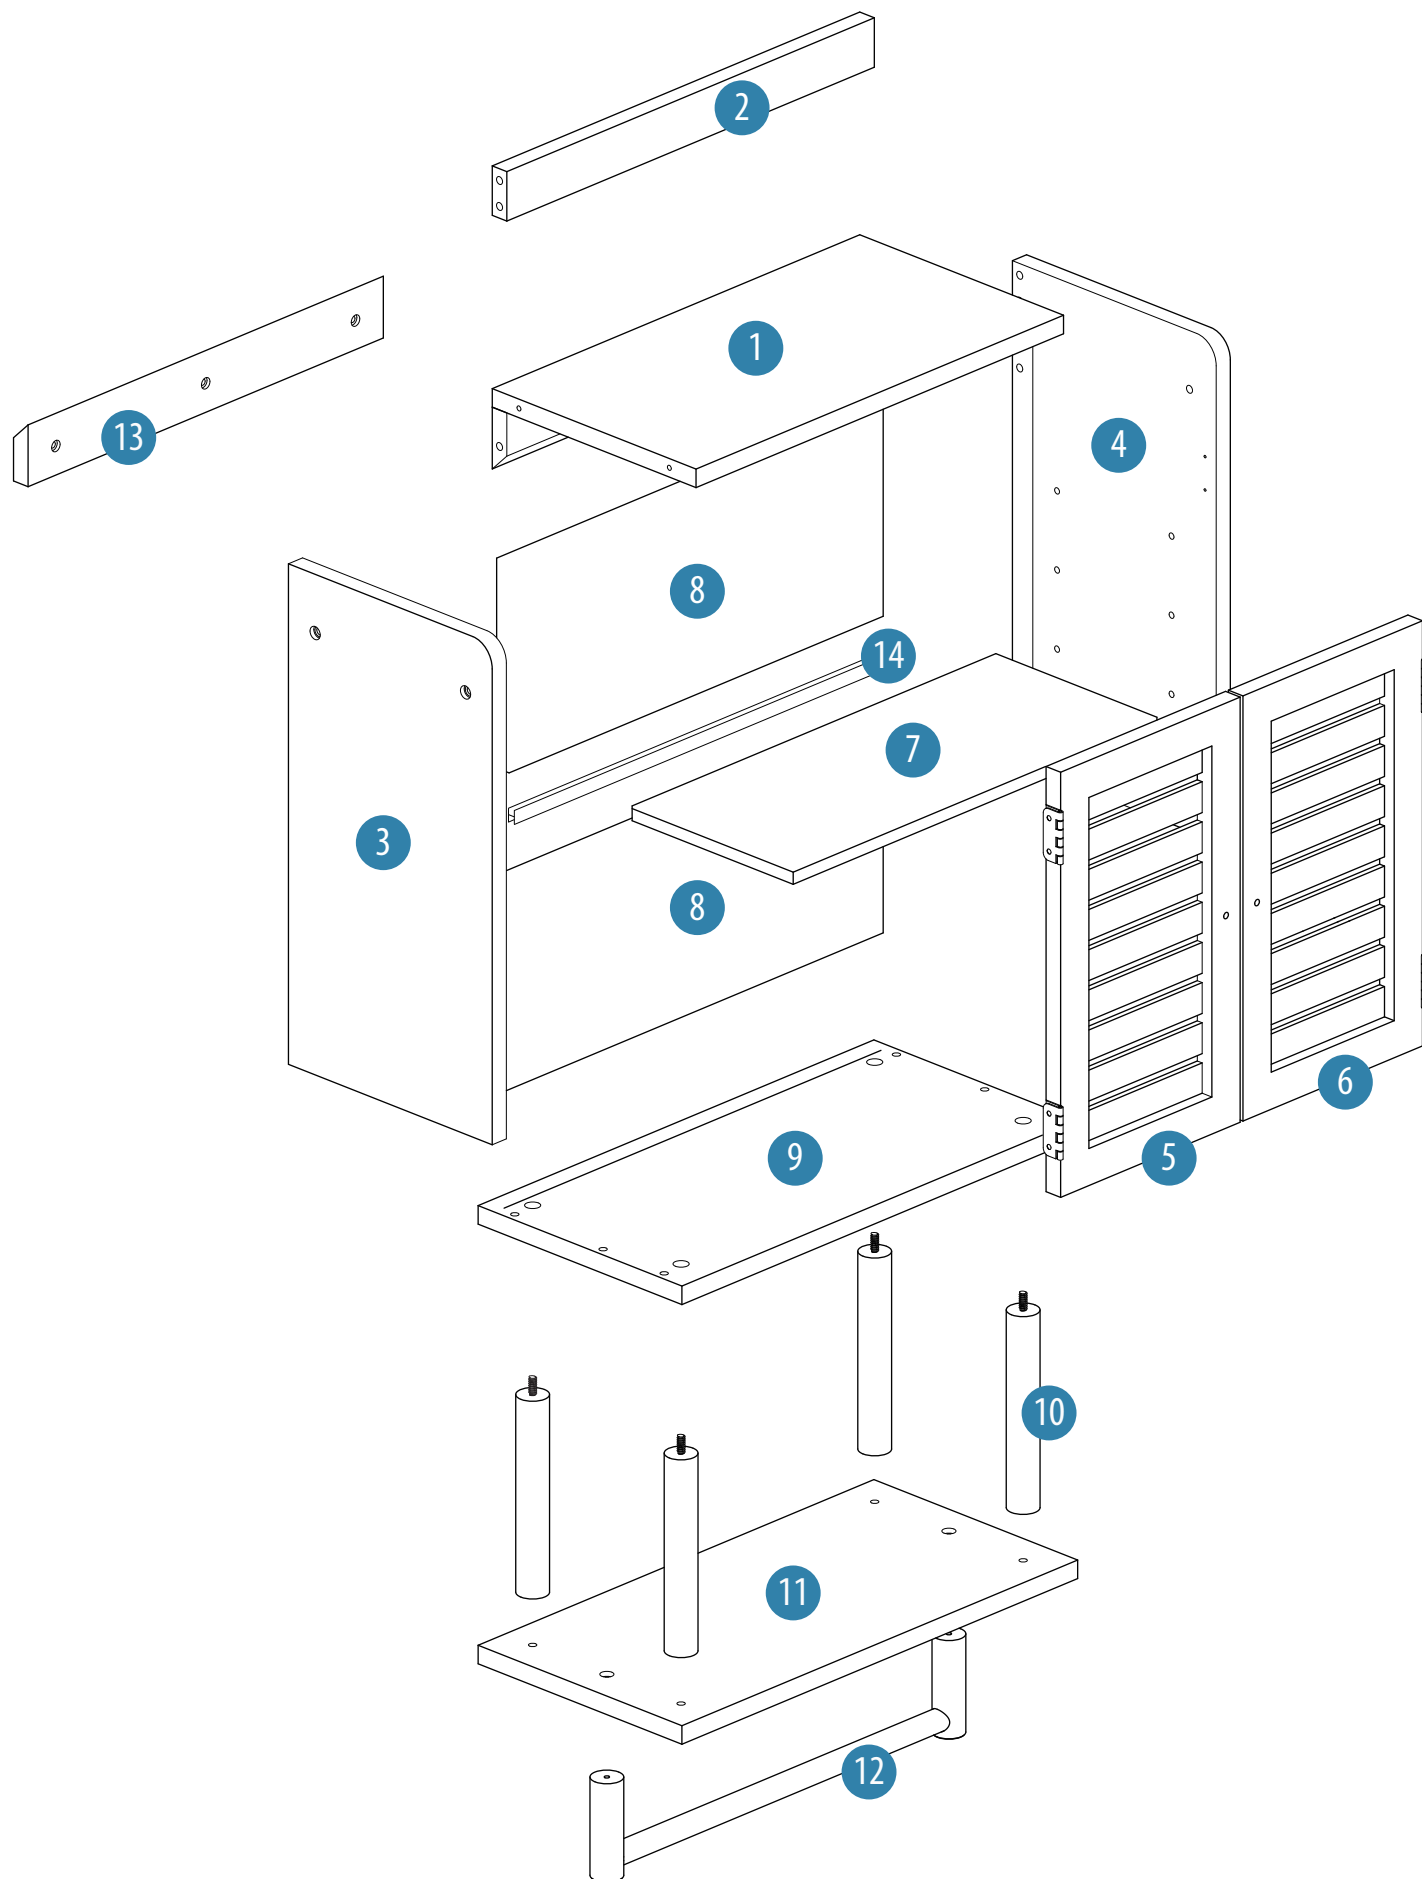Parts List

















Parts List

We are concerned about each customer's satisfaction.

If there is any missing or damage for your order, please don't hesitate to contact us.

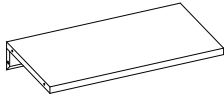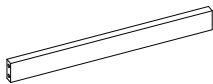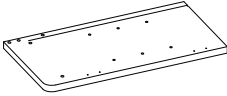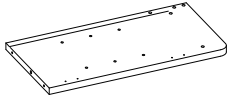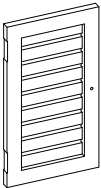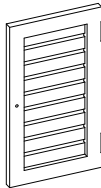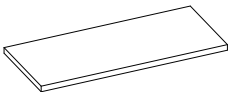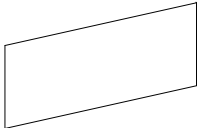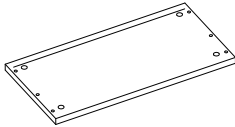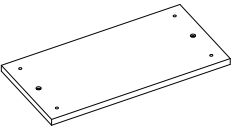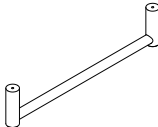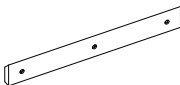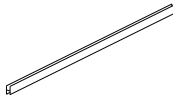Please attach your **Order ID** for more efficient assistance.









1 	2 	3 	4 	5 
6 	7 	8  X2 PCS	9 	10  X4 PCS
11 	12 	13 	14 	

The Philips-head screwdriver required for assembly (included).


The quantity of hardware listed above is necessary for proper assembly.

It is recommended to use an electric screwdriver for assembly.

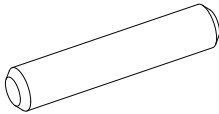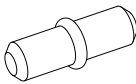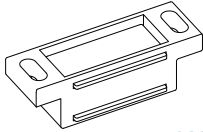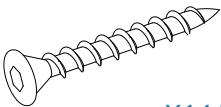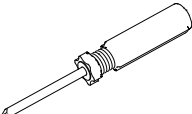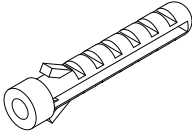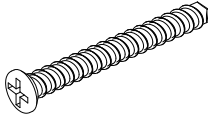
(If possible, please gently screw to prevent the bamboo from splitting).

A  X2 PCS	B  X8 PCS	C  X4 PCS	D  X1 PCS
E  X14 PCS	F  X10 PCS	G  X2 PCS	H  X1 PCS
I  X1 PCS	J  X3 PCS	K  X3 PCS	

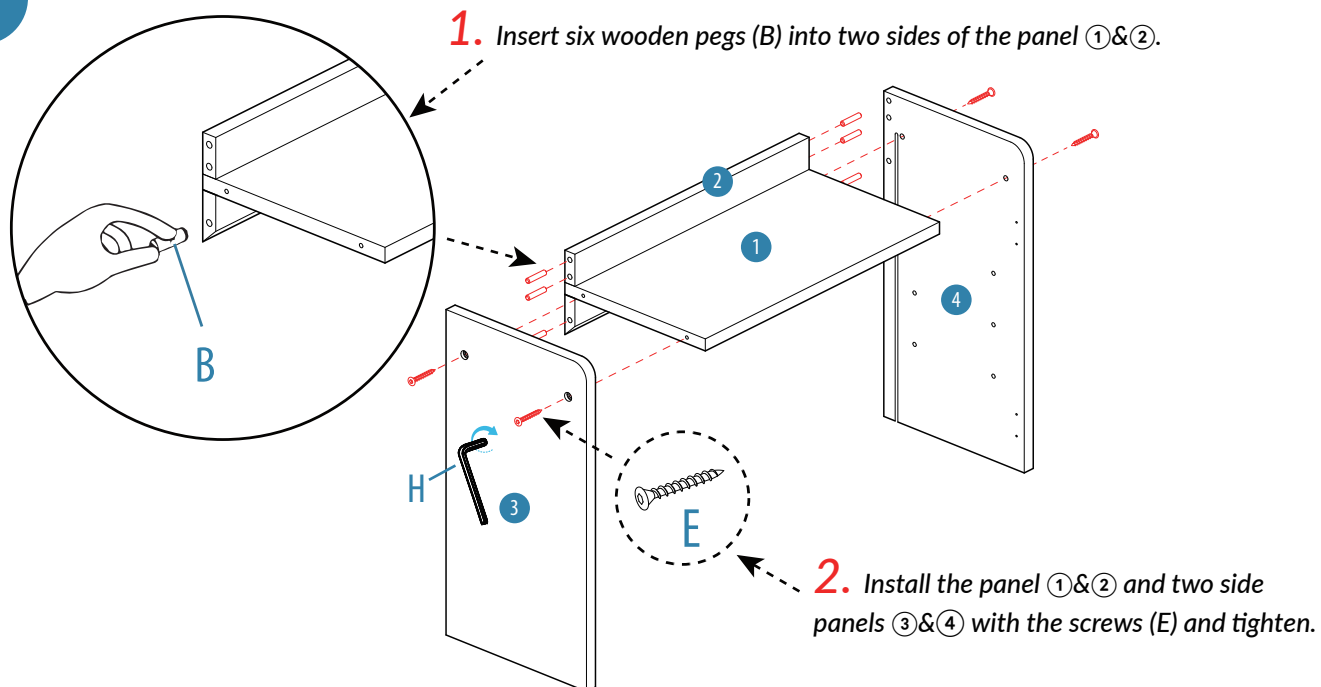
STEP 1



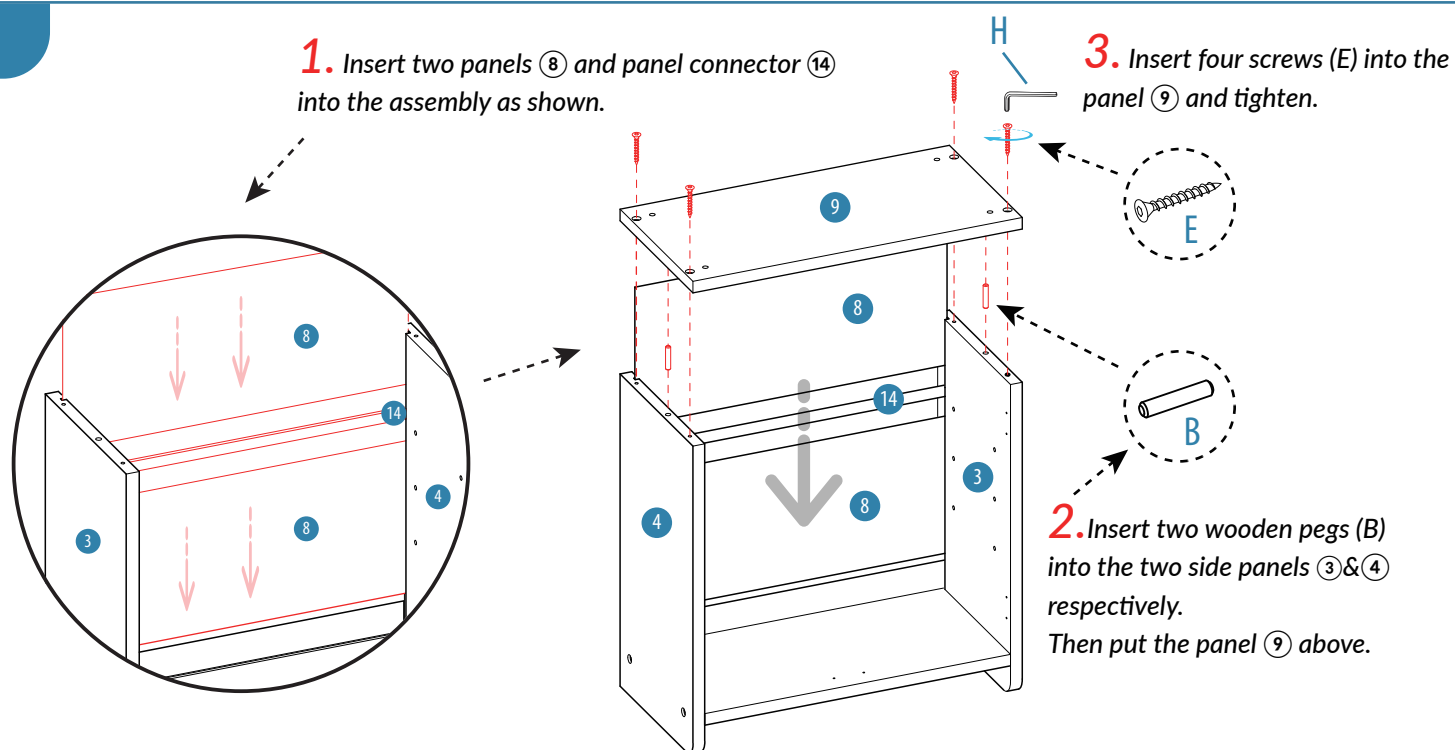
STEP 2



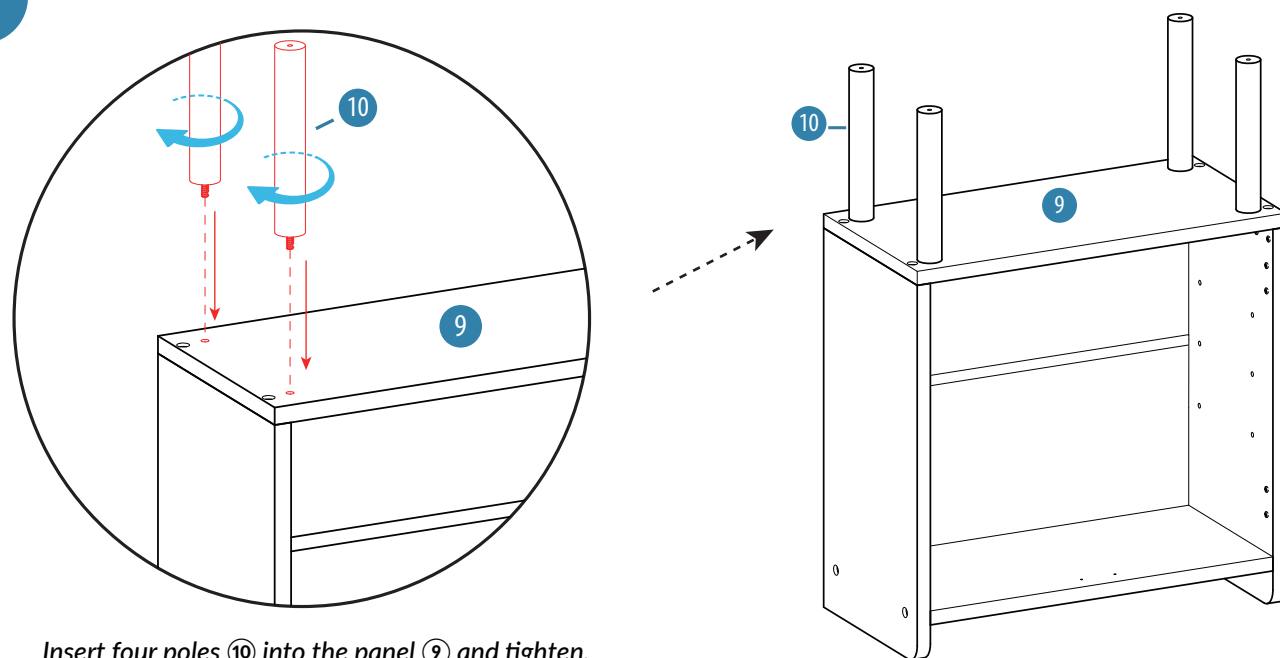
STEP 3



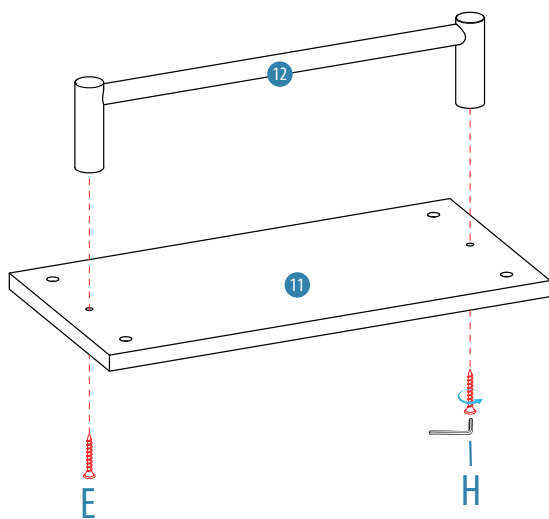STEP 4




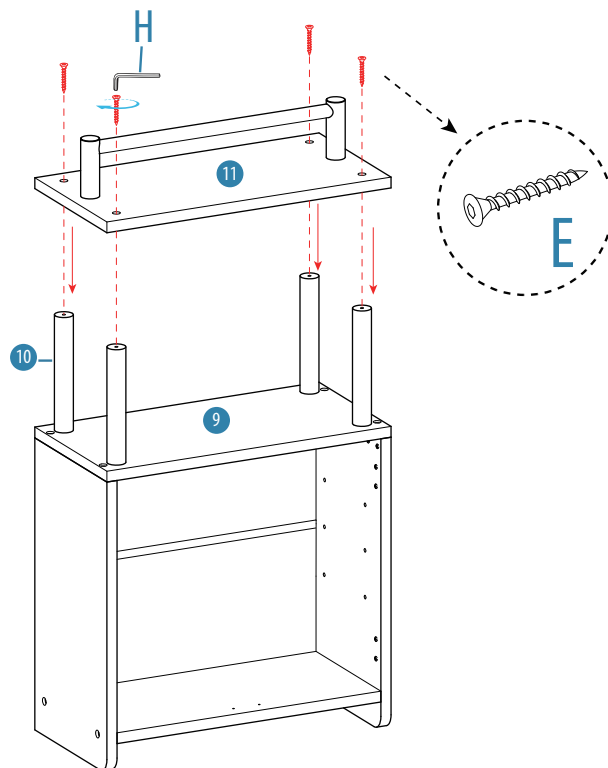1. Insert two screws (E) into the board (11) and the towel bar (12), then tighten.



2. Install the board (11) and the poles (10) with four screws (E) and tighten.

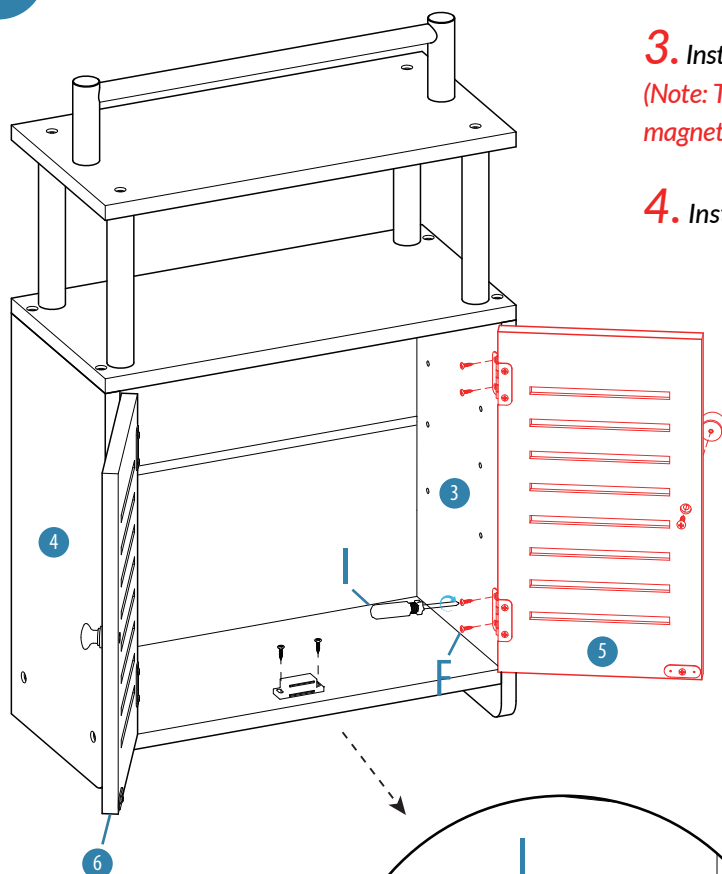
STEP 5



1. Install the magnetic catch (D) on the panel (1) with two screws (F).


3. Install the right door (5) on the panel (3) with four screws (F).
(Note: The magnetic on the door should be aligned with the magnetic catch (D).)

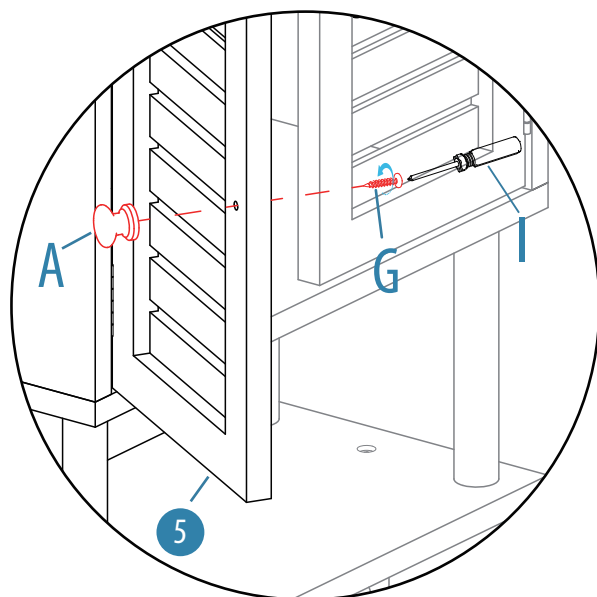4. Install the left door (6) according to the sequence 2-3 above.




2. Install the handle (A) on the right door (5) with two screws (G).

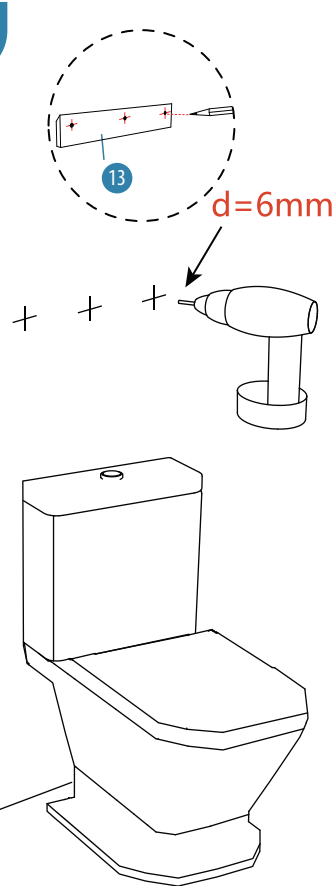STEP 6




Make sure the installation position of the strip ⑬ and mark the wall with a pencil through three holes as shown. Then use a 6mm diameter drill bit to drill holes at the marked positions.

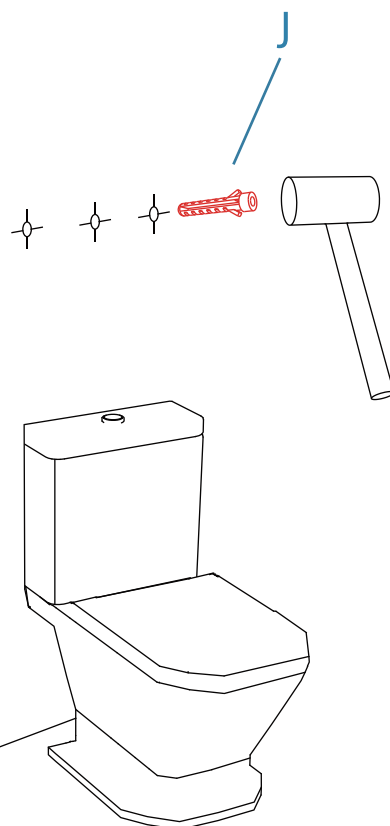STEP 7




Hammer the screw (J) into the holes.

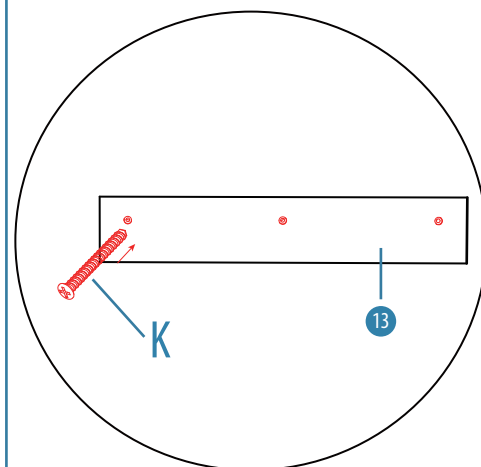STEP 8




Insert the screw (K) into the holes of strip ⑬ and tighten.

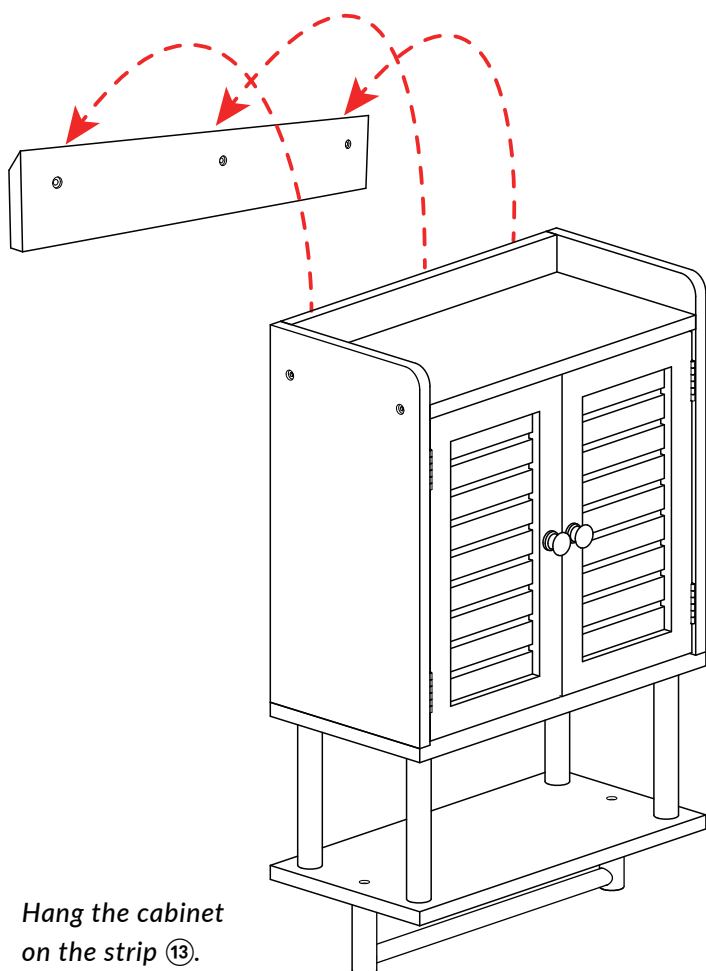STEP 9



Hang the cabinet on the strip ⑬.

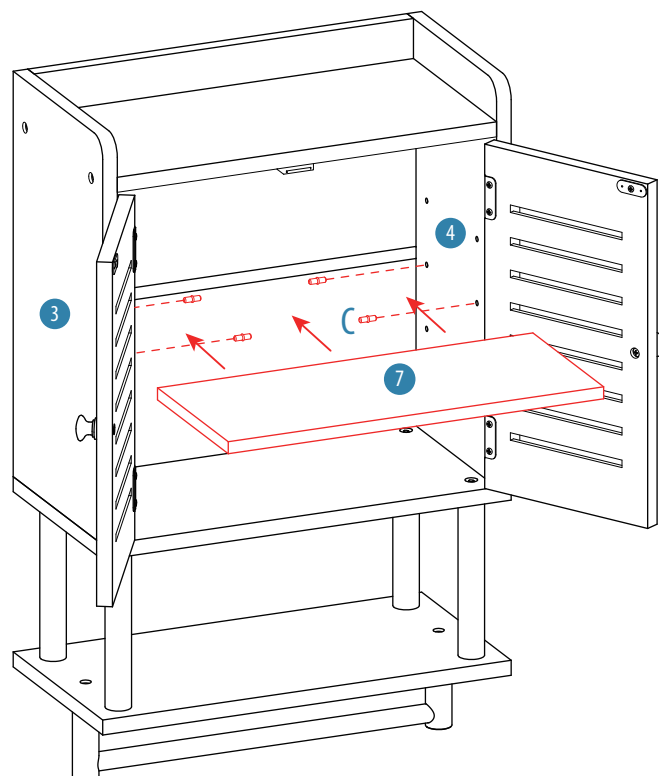STEP 10



Insert four screws (C) into the sides of the two panels ③/④ respectively. Then put the board ⑦ into the cabinet.