
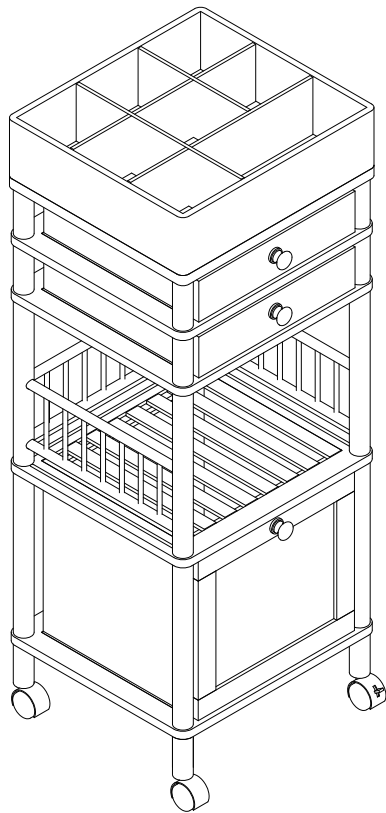





AMAZER

Makeup Organizer





Parts List:



A  Wheel * 2	B  Wheel (with brake) * 2	C  Layer Board * 4	D  Support Feet * 4	E1  Support Rod (four holes) * 2	E2  Support Rod (two holes) * 2
F  Short Support Feet * 8	G  Storage Box * 1	H  Horizontal Partition * 1	I  Horizontal Partition * 1	J  Vertical Partition * 1	K  Vertical Partition * 1
L  Bamboo Rail (Back) * 1	M  Bamboo Rail (Left & Right) * 2	N  Short Drawer * 2	O  Tall Drawer * 1	P  Bottom Board * 3	Q  Knob * 3
R  Screw * 4	S  Screw * 3	T  Allen Wrench * 1			

Installation Steps:

- 1 Install Back Bamboo Rail (L) with two Support Rods (E1) and tighten.

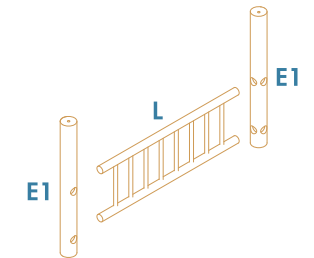
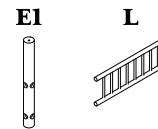


- 2 Thread two Support Feet (D) through the holes of Layer Board (C), tighten them with the corresponding Support Rods (E) of Step 1.

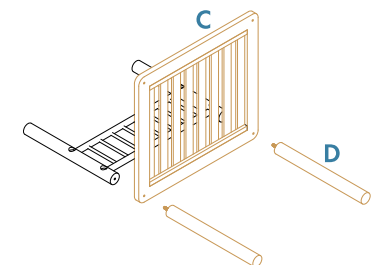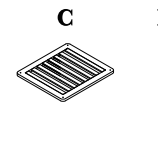



3

Install Left & Right Bamboo Rail (M) with Support Rods (E1 & E2) and tighten; Thread two Support Feet (D) through Layer Board (C) and tighten.

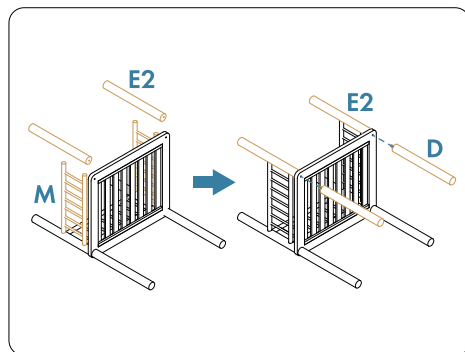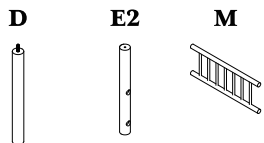



4

Thread Wheel (A) and Wheel with brake (B) through the holes of Layer Board (C), tighten them with the corresponding four Support Feet (D). Note: Wheels (B) need to be installed in the same side.

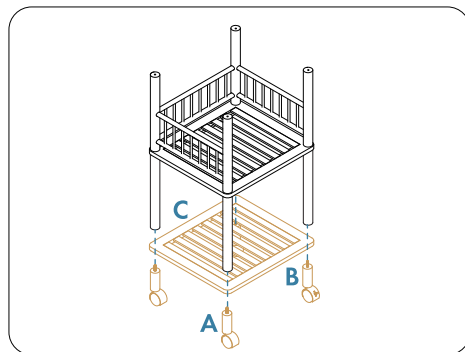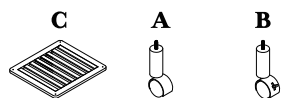



5

Thread four Short Support Feet (F) through the holes of Layer Board (C), tighten them with the corresponding four Support Rods (E1 & E2).

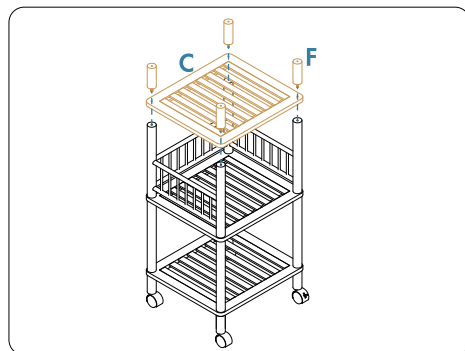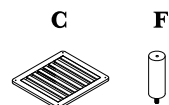



6

Same installation as Step 5

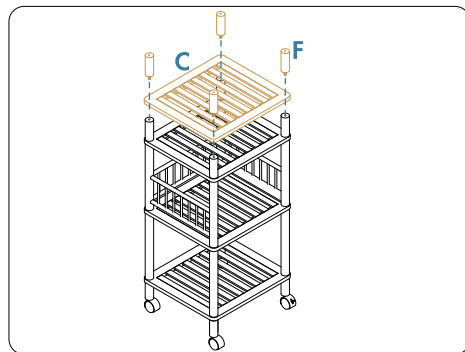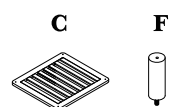



7

Align the holes of Storage Box (G) with Short Support Feet (F), then tighten them with four Screws (R).

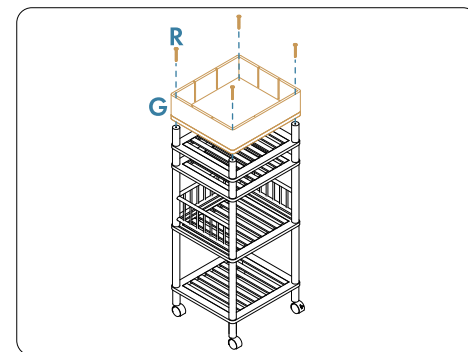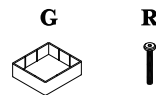


8

Unfold Short Drawer (N) and Tall Drawer (O), put Bottom Board (P) inside. Use Screw (S) to install Knob (Q).

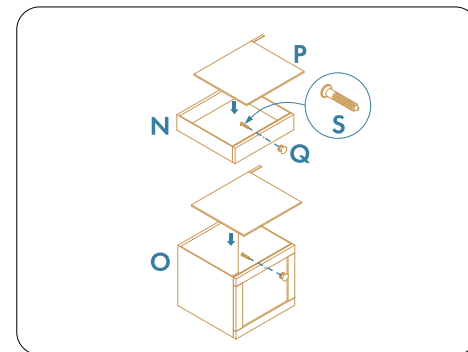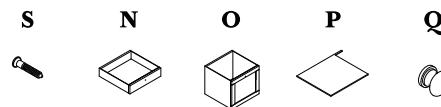

9

First insert Horizontal Partition (H & I) in Storage Box (G) as shown, then insert Vertical Partition (J & K) in the corresponding slots.

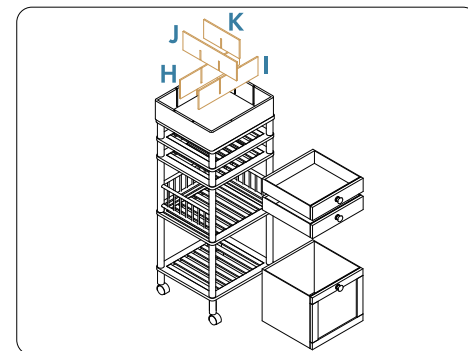

10

Put Short Drawer (N) and Tall Drawer (O) in the corresponding position.

