



Bathroom Organizer

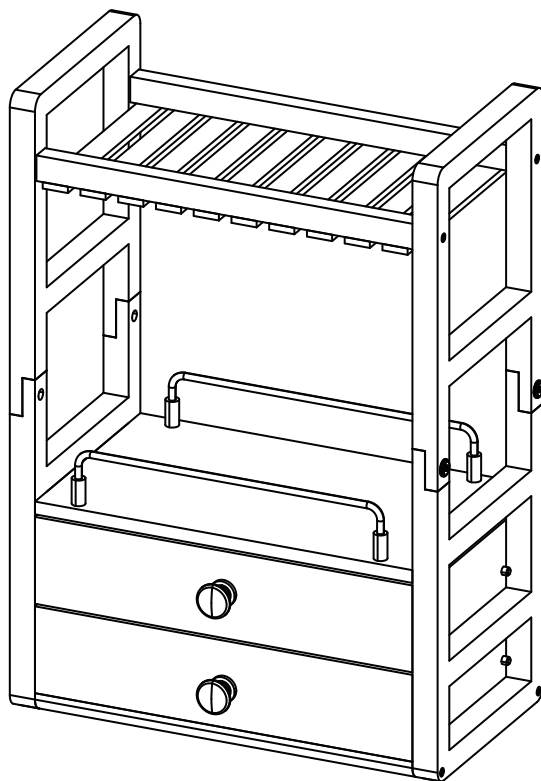

ASSEMBLY INSTRUCTIONS




Parts List




Top Frame (A) × 2

A

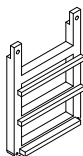


Bottom Frame (B) × 2

B

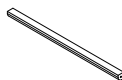


Bottom Retaining Rail (C) × 2

C

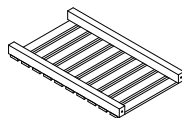

Board (D) × 1

D

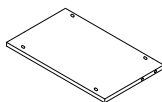


Layer Board (E) × 1

E




Metal Edge Rail (F) × 2

F

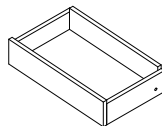

Drawer (G) × 2

G

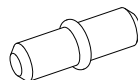

Metal Peg (H) × 8

H



Knob Set (I) × 2

I




A/B Screw × 8

AB



C/D Screw × 8

CD

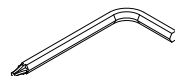

Cross Wrench (J) × 1

J





Allen Wrench (K) × 1

K

Step 1



Use two Screws (A/B) to connect Top Frame (A) with Bottom Frame (B), then use Cross Wrench (J) to tighten.

Repet this step to install another frame.

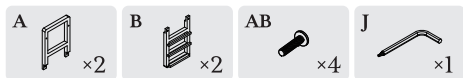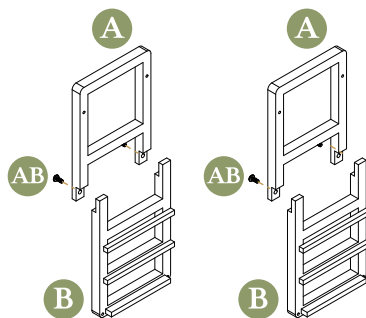


Step 2

Use four Screws (C/D) to connect Bottom Retaining Rail (C) , Board (D) with assembled Step 1, then use Allen Wrench (K) to tighten.

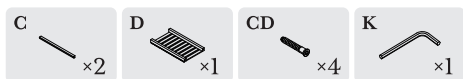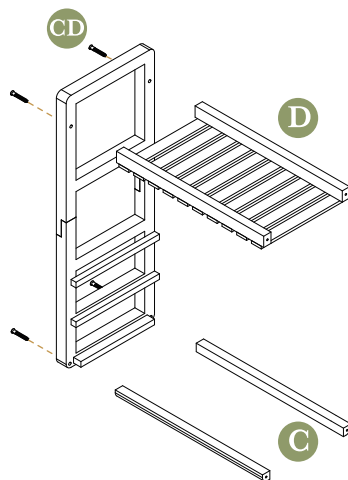


Step 3

Connect Step 1 with Step 2 as shown, tighten with Screws (C/D).

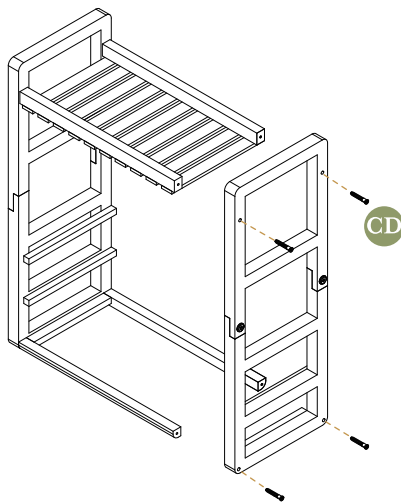



Step 4

Use Screw of Knob Set (I) to install knob with drawer (G), then tighten with Cross Wrench (J).

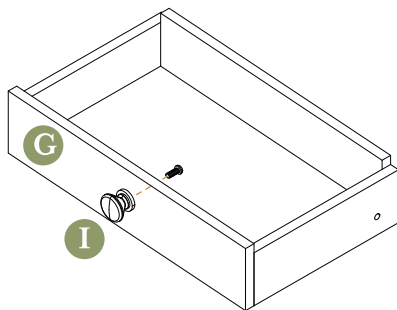

Step 5

Use four Screws (A/B) to install Metal Edge Rail (F) with Layer Board (E), then tighten with Cross Wrench (J).

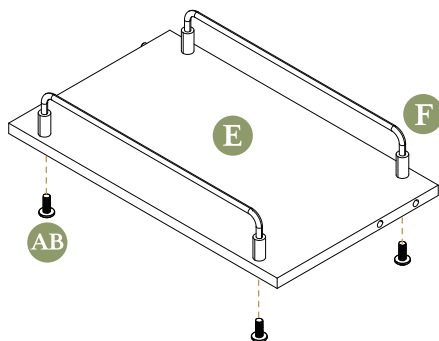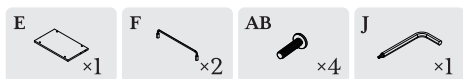

Step 6

Place two assembled Drawers (G) and Step 5, and insert Metal Pegs (H) into each side to prevent the drawers and layer board from slipping out.

