



AMAZER




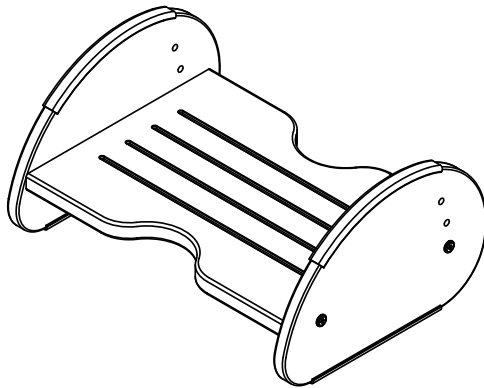


without cushion

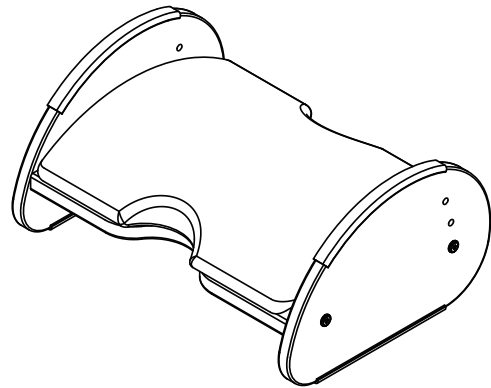

with cushion


Parts List:

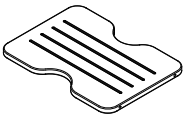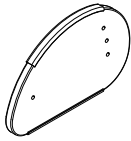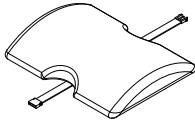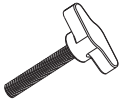A	Panel	B	Side Panel	C	Cushion	D	Allen Wrench	E	Optional Screw
			Optional Accessories						
	X1	X2		X1		X1		X2	X5

Installation Steps:

1


Secure four screws (E) to the two side panels (B) and panel (A) in the appropriate holes with Allen wrench (D) according to your usage needs.

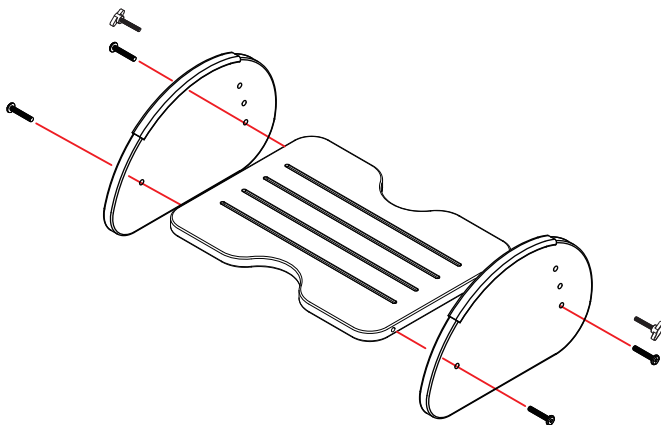


Note: Do not fully tighten the first screw during installation. Align both screws, then tighten them securely.

2

Put the cushion (C) (**Optional Accessories**) on the panel (A) and fasten the buckle.

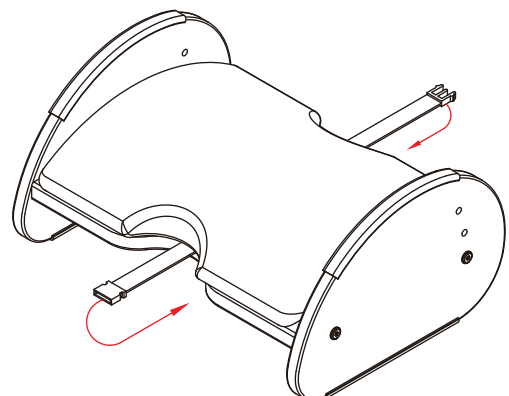


Office Footrest

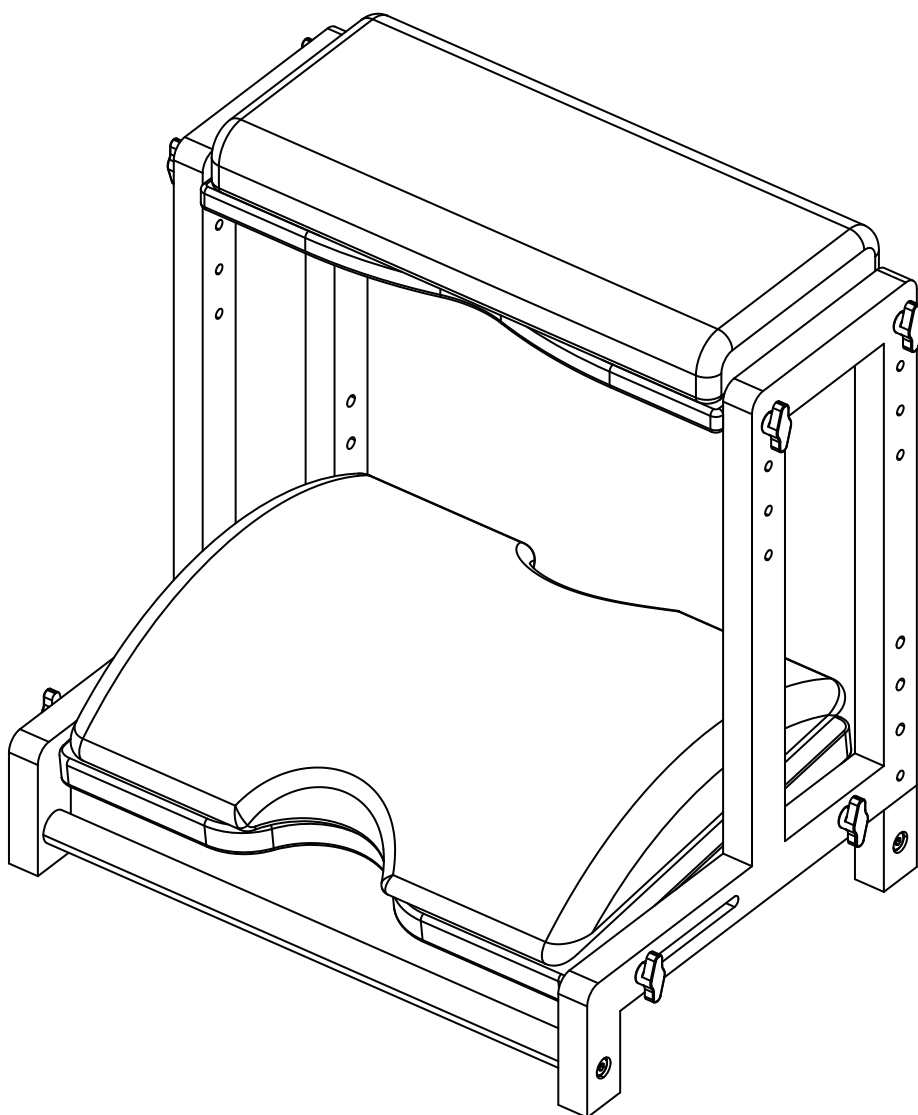

ASSEMBLY INSTRUCTIONS


Parts List

A

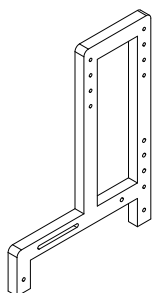


Left Side Panel (A) * 1

B

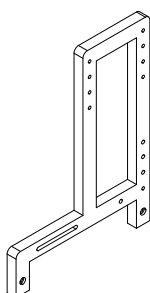


Right Side Panel (B) * 1

C

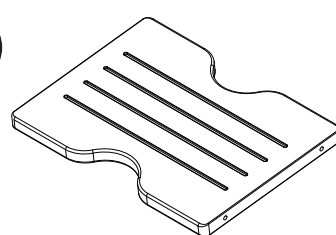


Lower Panel (C) * 1

D

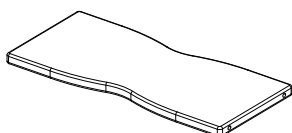


Upper Panel (D) * 1

E

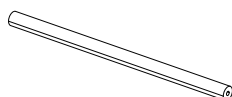


Rod (E) * 2

F

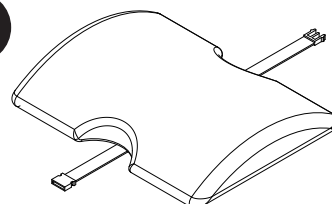


Lower Cushion (F) * 1

G

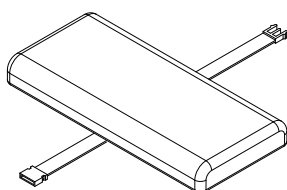


Upper Cushion (G) * 1

H

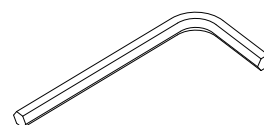


Allen Wrench (H) * 1

I

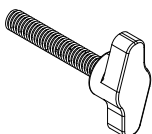


Screw (I) * 6

J

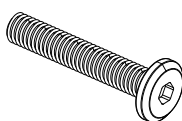

Screw (J) * 4

K


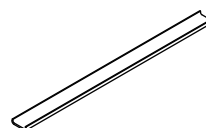


Rubber Strip (K) * 1

Installation Steps

Step 1:



Align two rods (E) with the pre-drilled holes at the bottom corners of the left and right panel (A)+(B). Insert four screws (J) and tighten them using Allen wrench (H).

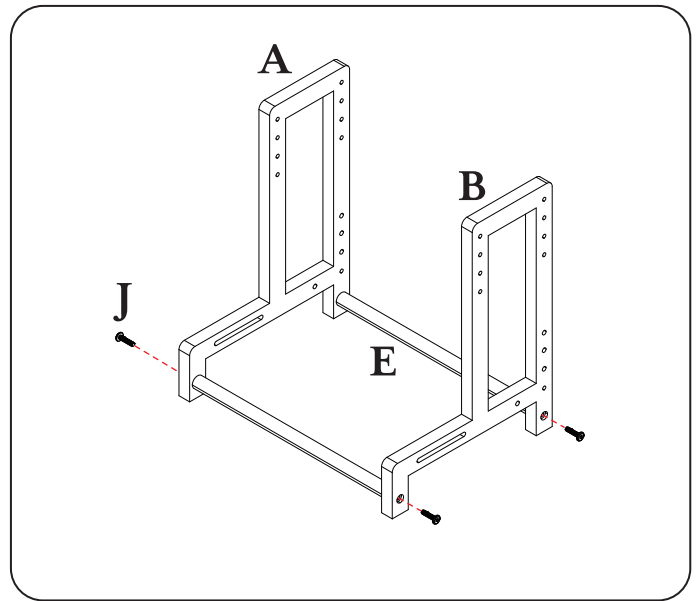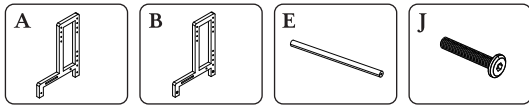

Step 2:



Align the pre-drilled holes of lower panel (C) with the bottom sliding grooves of the left and right panels, then use two screws (I) to secure them in place.

Tip: Do not fully tighten the screws on the lower panel, so that the panel can be adjusted easily for height positioning later.

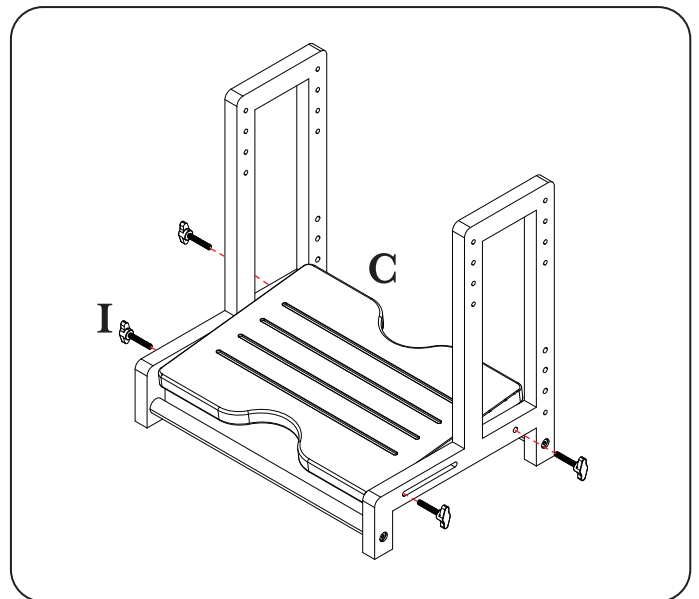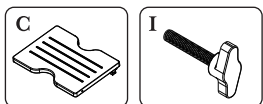

Step 3:

Turn it upright position. Align upper panel (D) with the pre-drilled holes at the top of the left and right panels. Insert four screws (I) and tighten them securely.

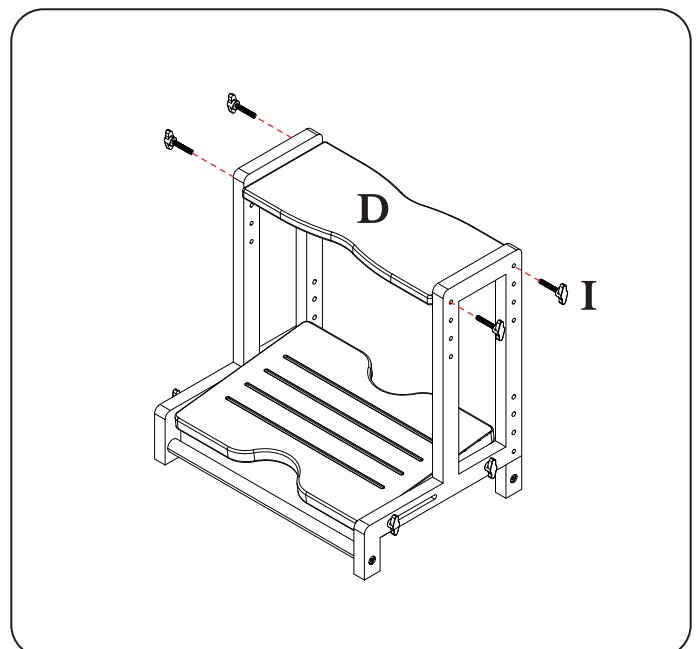
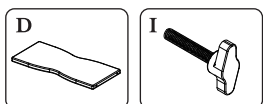


Installation Steps

Step 4:

Place lower cushion (F) and upper cushion (G) onto lower and upper panels respectively. Secure them in place by fastening the straps to the panels.

Cut the rubber strip (K) to the proper length and attach them to the bottom of the stool legs for effective anti-slip performance. Keep leftover rubber strips for future replacement.

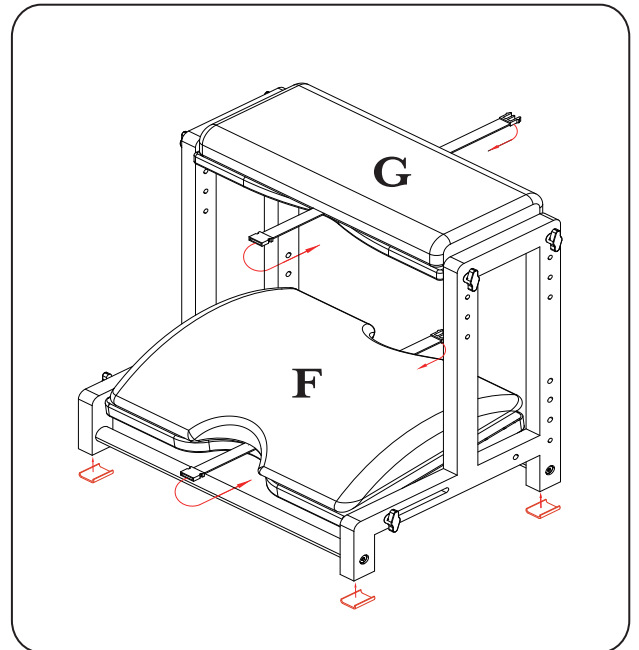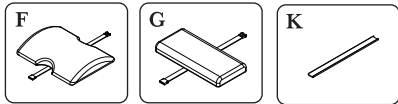

One more thing:

It can be flexibly adjusted to multiple angles to make your feet more comfortable!!

