


Bamboo Wall Mounted Mirror Cabinet

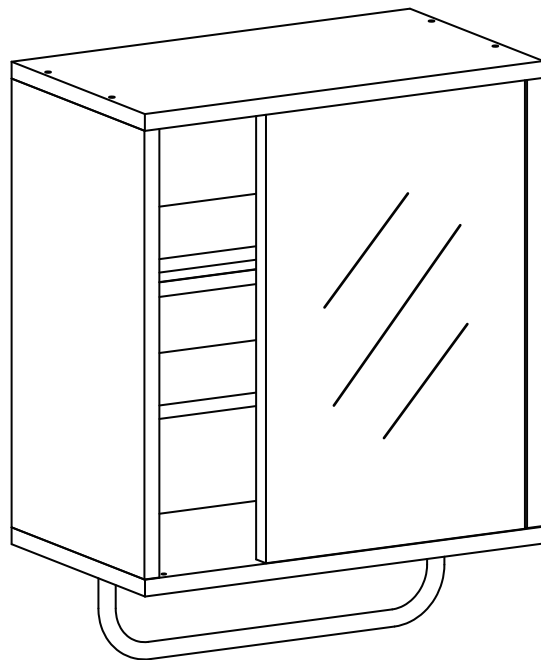


ASSEMBLY INSTRUCTIONS



Attention:

1. Check parts for quantity and damage before installation. If there is any missing or damage for your order, please don't hesitate to contact us by Amazon Buyer-seller messaging.
2. No over-tightening screws to prevent damage to the panels or strip the screws.



Part List

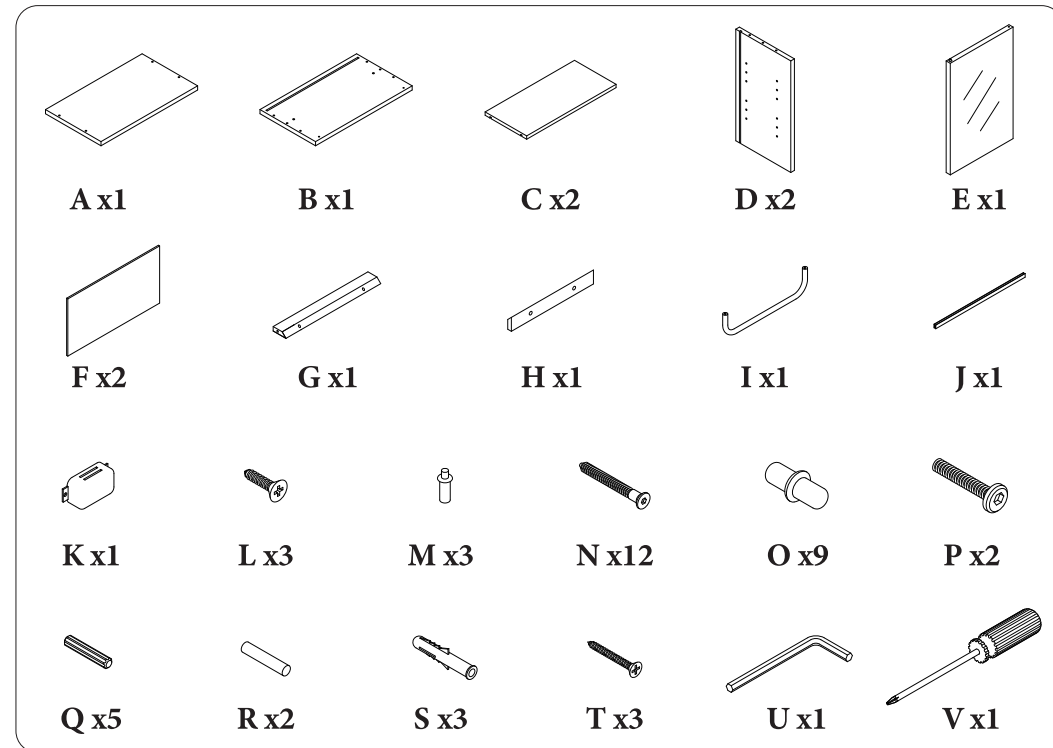

Installation Steps

Step 1

Insert two steel dowels (R) into two sides of part (G), then align two panels (D) with the holes as shown to install.

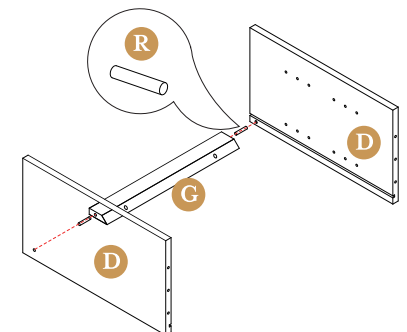
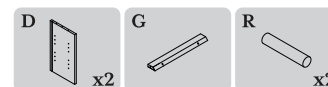


Step 2

① Install the magnetic catch (K) on the panel (A) with two screws (L), then tighten with screwdriver (V).



② Insert two wooden dowels (Q) into panel (A) as shown, then install panels (A & D) with four screws (N), tighten with Allen wrench (U).

③ Insert two screws (N) into the holes of part (G), tighten them with Allen wrench (U).

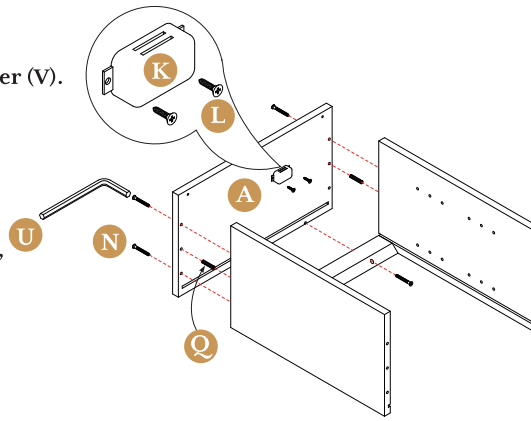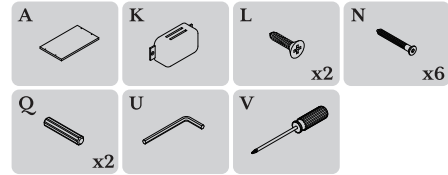

Step 3



Install towel bar (I) with panel (B) using screws (P), then tighten with Allen wrench (U).

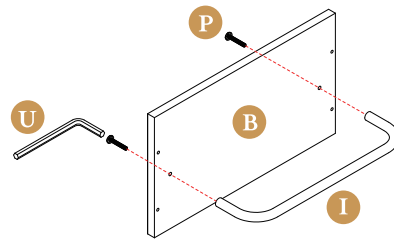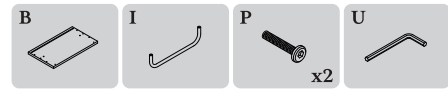

Step 4



① Align the side slots of panels (D) with panel (F), push to the end, then insert strip (J) and install another panel (F).

② Insert two wooden dowels (Q) into panel (D) as shown, then connect panels (B & D) with four screws (N), tighten with Allen wrench (U).

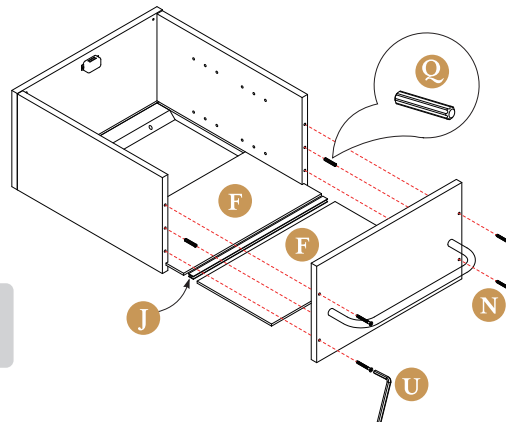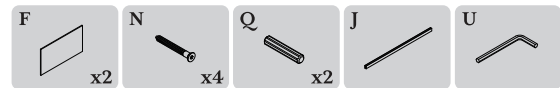



Step 5

Insert Part (M) into the top and bottom side holes of door panel (E) ensuring that the position of magnetic plate as shown. The mirror surface is on the outside. Press part (M) to install it into the holes of panels (A & B).

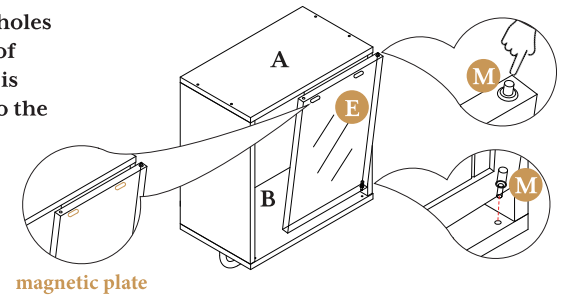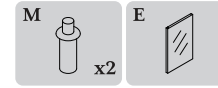

Step 6



Insert eight panel dowels (O) into the sides of two panels (D) respectively as shown. Then put two panels (C) into the cabinet.

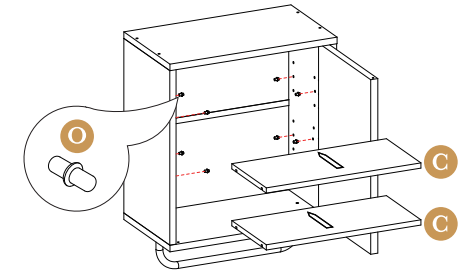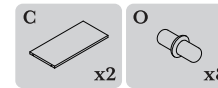

Step 7

① Make sure the installation position of the strip (H) and mark the wall with a pencil through two holes as shown.

② Drill holes at the marked positions and hammer plastic expanding plug (S) into the wall, then install strip (H) with two screws (T), tighten with screwdriver (V).

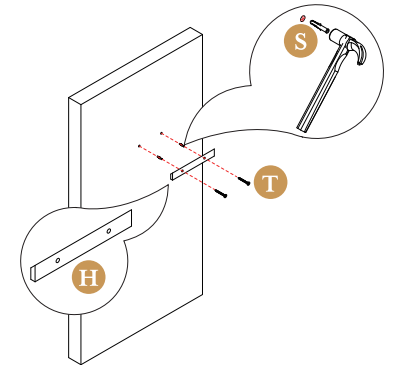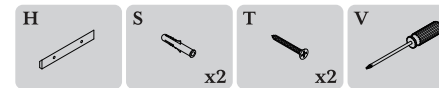

Step 8

Install towel bar (I) with panel (B) using screws (P), then tighten with Allen wrench (U).

