


BAMBOO WALL MOUNTED CABINET

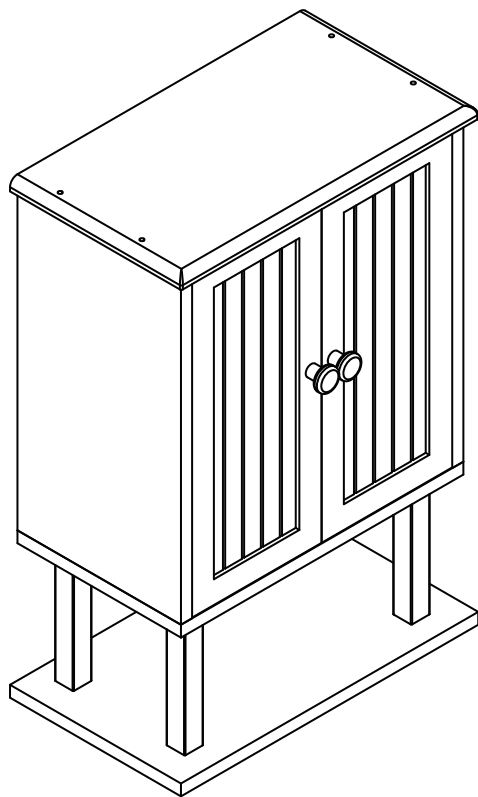


ASSEMBLY INSTRUCTIONS



Attention:

1. Check parts for quantity and damage before installation. If there is any missing or damage for your order, please don't hesitate to contact us by Amazon Buyer-seller messaging.
2. No over-tightening screws to prevent damage to the panels or strip the screws.



Part List

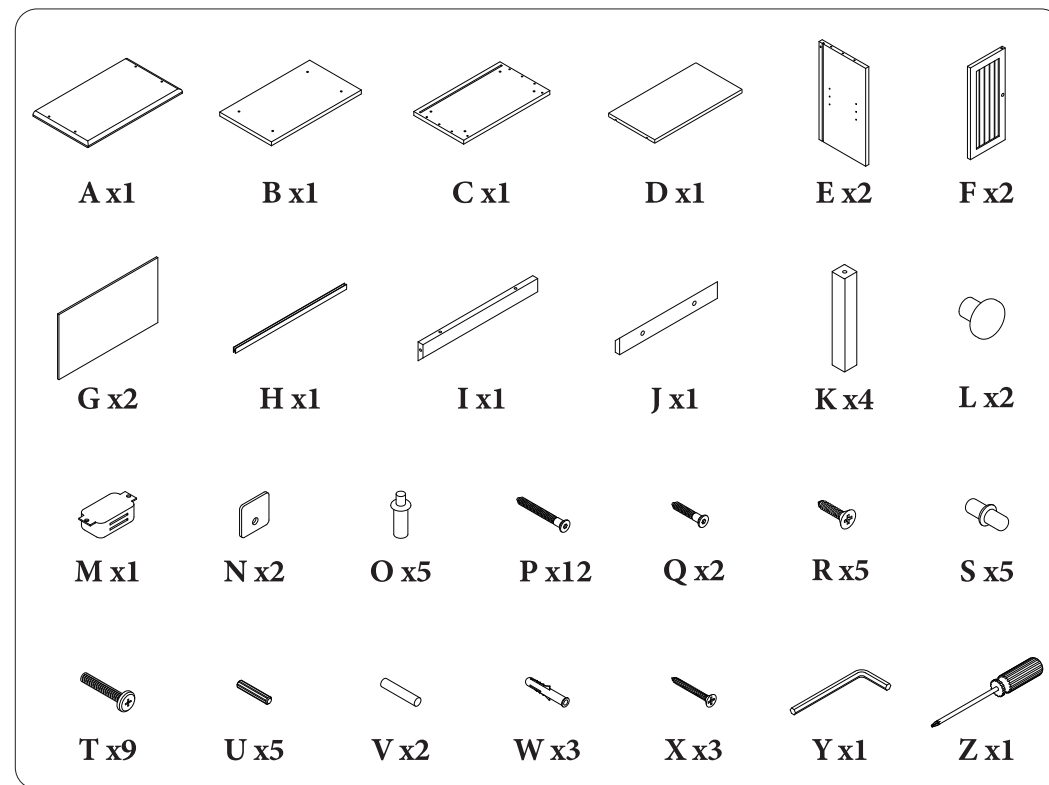

Installation Steps



Step 1

Insert two steel dowels (V) into two sides of part (I), then align two panels (E) with the holes as shown to install.

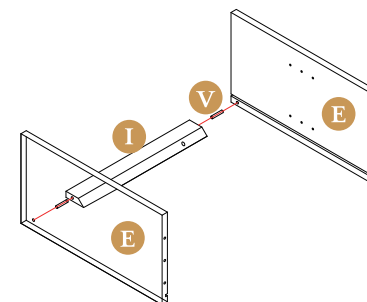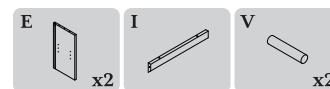


Step 2

- ① Install the magnetic catch (M) on the panel (A) with two screws (R), then tighten with screwdriver (Z).
- ② Insert two wooden dowels (U) into panel (A) as shown, then install panels (A & E) with four screws (P), tighten with Allen wrench (Y).
- ③ Insert two screws (P) into the holes of part (I), tighten them with Allen wrench (Y).

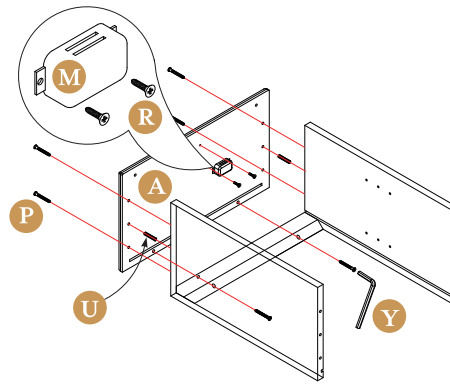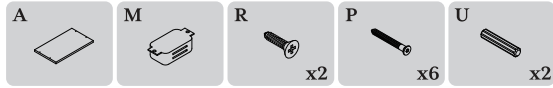



Step 3

- ① Align the side slots of panels (E) with panel (G), push to the end, then insert strip (H) and install another panel (G).
- ② Insert two wooden dowels (U) into panel (E) as shown, then connect panels (C & E) with four screws (P), tighten with Allen wrench (Y).

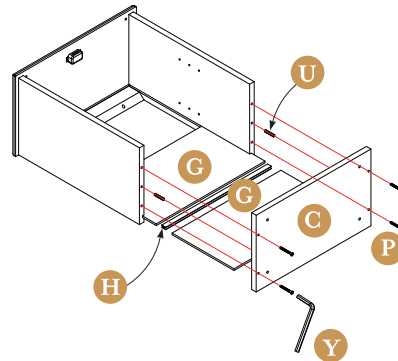



Step 4

- ① Insert four screws (T) from inside panel (C) as shown, and align with four poles (K) with screws (T) to tighten with screwdriver (Z).
- ② Install panel (B) with four screws (T), tighten with screwdriver (Z).

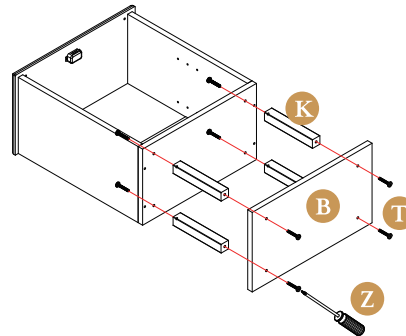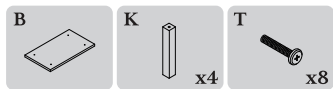



Step 5

- ① Install knob (L) with door panel (F) using screws (Q), then tighten with Allen wrench (Y).
- ② Align the hole of door panel (F) with part (N) using screws (R), then tighten with screwdriver (Z). Same installation to another door panel.

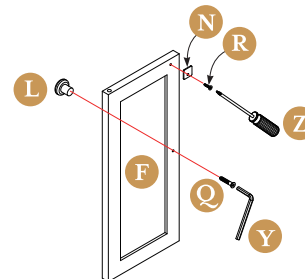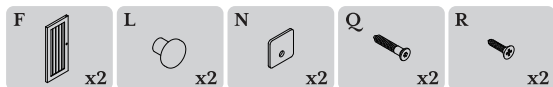



Step 6

Insert Part (O) into the top and bottom side holes of door panel (F), ensuring that the position of part (N) as shown. Press part (O) to install it into the holes of panels (A & C). Same installation to another door panel.

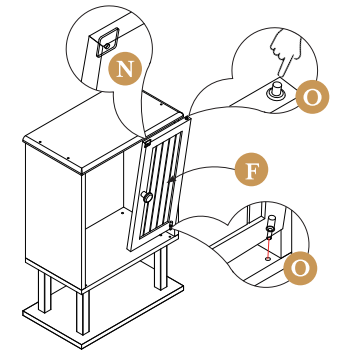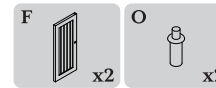



Step 7

Insert four panel dowels (S) into the sides of two panels (E) respectively as shown. Then put panel (D) at an angle to the left or right into the cabinet.

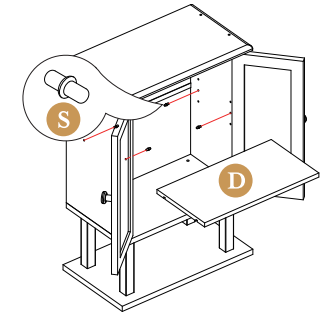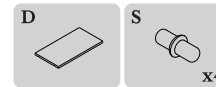

Step 8

- ① Make sure the installation position of the strip (J) and mark the wall with a pencil through two holes as shown.
- ② Drill holes at the marked positions and hammer plastic expanding plug (W) into the wall, then install strip (J) with two screws (X), tighten with screwdriver (Z).

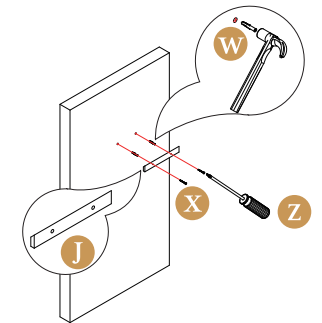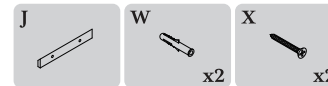

Step 9

Hang the cabinet on the strip (J) as shown.

